raymax IP and rayLux IP illuminators installation guide

This installation guide provides instructions for installing the RAYMAX and RAYLUX series illuminators

Installation Steps


- 1. Mount Illuminator
- 2. Connect Power


Set Up Steps

- 1. Optional night set-up for optimum image performance
- 2. Adjust vertical angle
- 3. Tighten all fixings


Package Contents

1. Illuminator with Integrated PSU

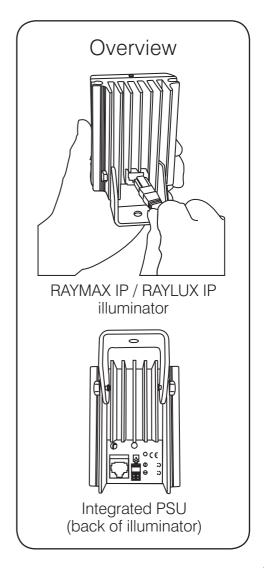


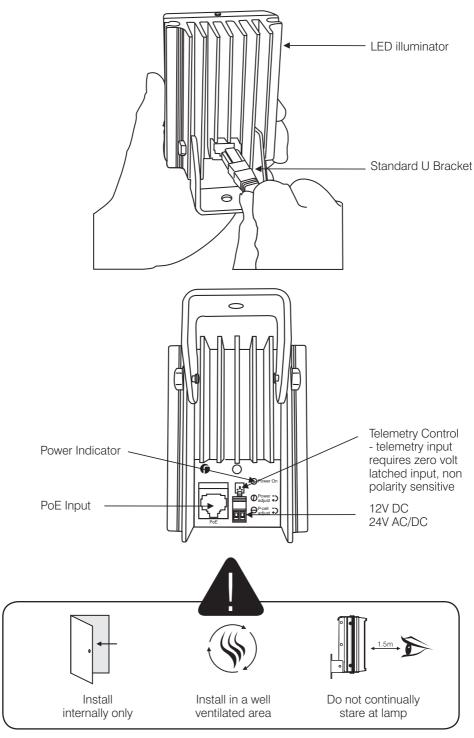


Installation

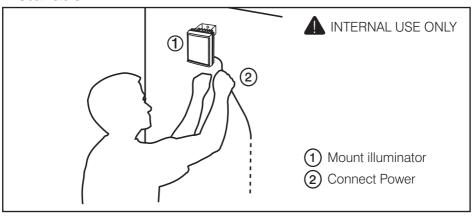


Set Up

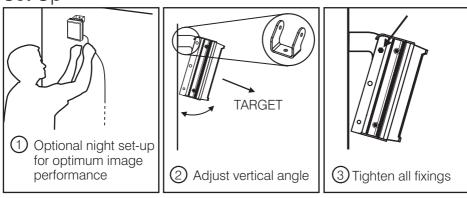


Match illumination to camera field of view

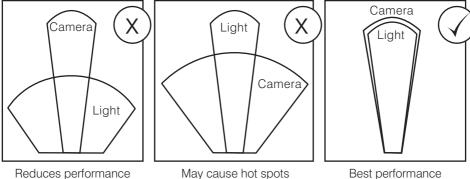

Technical Drawings (Not to scale)

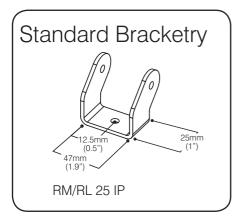

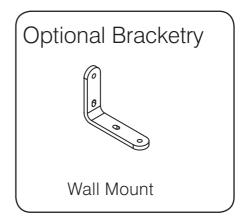

Specifications

INFRA-RFD and WHITF-LIGHT Series

Input	Output	PoE	Photocell	Adjustable Power	Weight	Dimensions L x W x D
PoE or 12V DC 24AC/DC	12W	IEEE802af Compliant Interface Power classification (class 0) CAT5 Cable	Integrated (adjustable sensitivity)	10% - 100%	1.0kg (2.2lbs)	75 x 100 x 54mm 3" x 4" x 2" (approx)

Command and Control Integrated Power Supply Features

STANDARD PSU

- Adjustable photocell
- Adjustable power
- Telemetry input

Trouble Shooting

Step 1: Basics

Check blue LED 'power on' light is illuminated on the back of the IP unit.

If Yes.

- Ensure power adjust is turned to the maximum level.
- Ensure Photocell is covered and if necessary adjust the photocell sensitivity.

If No.

- Confirm that the PoE injector unit is fully functioning.
 NB: Refer to manufacturer's guide
- Check that the cable is fully intact, and not broken or split.

Step 2: Set-up Camera, lens and illumination

Check alignment of lamp

Check camera lens - fully open at night & set correctly.

Check model number to Raytec performance specification to ensure required distance is achievable.

Step 3: Call Raytec for further assistance

Note down:

- Model and serial number of illuminator
- Camera make and model
- · Lens make and model

If the Raytec lamp is still not delivering the required performance, please contact us for further assistance.

raytec"

UK / Europe T: +44 (0) 1670 520055 F: +44 (0) 1670 819760 sales@raytecctv.com

Americas (Toll Free)
T: +1 888 505 8335
ussales@rayteccctv.com

www.rayteccctv.com